

# U72 Option Switch Settings (Pulse/MDB/RS232 104U)

Supported bill GTQ 1, 5, 10, 20 4 Bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject GTQ 1	ON											
★ Accept GTQ 1	OFF											
★ Reject GTQ 5		ON										
★ Accept GTQ 5		OFF										
★ Reject GTQ 10 & 20			ON									
★ Accept GTQ 10 & 20			OFF									
★ High Acceptance				ON								
★ High Security				OFF								
★ Enable, if fishing, BA doesn't work anymore					ON							
★ Disable, BA works normally					OFF							
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
★ Harness Disable							ON					
★ Harness Enable							OFF					
★ Inhibit Active HIGH								ON				
★ Inhibit Active LOW								OFF				
★ Power On Stacker									ON			
★ Power On Reject									OFF			
★ Slow Output Pulse	Lo 50 ms									ON		
	Hi 300 ms											
★ Fast Output Pulse	Lo 50 ms									OFF		
	Hi 100 ms											
★ Reserved											ON	
★ Reserved											OFF	
★ Reserved												ON
★ Reserved												OFF

★Manufacture setting

Note : Please reset the bill acceptor after any changes on Dip switch.

# U72 GTQ4(Pulse/MDB/RS232 104U)

## DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal High	ON			
	Credit-Pulse Normal Low	OFF			
★	Pulse Mode		ON		
	Other Mode		OFF		
★	1 pulse / GTQ 1			OFF	OFF
	2 pulse / GTQ 1			OFF	ON
	4 pulse / GTQ 1			ON	OFF
	20 pulse / GTQ 1			ON	ON

★Manufacture setting

## DIP SWITCHES SETTING : 2(RS232 104U)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON		
★	Other Mode		OFF		
	MDB			OFF	OFF
★	RS232 104U			OFF	ON
	Reserved			ON	OFF
	Reserved			ON	ON

★Manufacture setting

## DIP SWITCHES SETTING : 2(MDB)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON		
★	Other Mode		OFF		
★	MDB			OFF	OFF
	RS232 104U			OFF	ON
	Reserved			ON	OFF
	Reserved			ON	ON

★Manufacture setting

Note :(1) Please reset the bill acceptor after any changes on Dip switch.

(2)Please open the panel of front, and can see the DIP switch.

## Currency Assign Data

Interface Bill value	Pulse	MDB	RS232 104U
BV1	GTQ 1	GTQ 1	GTQ 1
BV2	GTQ 5	GTQ 5	GTQ 5
BV3	GTQ 10	GTQ 10	GTQ 10
BV4	GTQ 20	GTQ 20	GTQ 20