

U72 Option Switch Settings (Pulse/MDB/RS232 104U)

Supported bill NTD 100, 200, 500, 1000 4 Bills.

| FUNCTION | SW1 | SW2 | SW3 | SW4 | SW5 | SW6 | SW7 | SW8 | SW1 | SW2 | SW3 | SW4 |
|--|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| ★ Reject NTD 100 | ON | | | | | | | | | | | |
| ★ Accept NTD 100 | OFF | | | | | | | | | | | |
| ★ Reject NTD 200 | | ON | | | | | | | | | | |
| ★ Accept NTD 200 | | OFF | | | | | | | | | | |
| ★ Reject NTD 500 & 1000 | | | ON | | | | | | | | | |
| ★ Accept NTD 500 & 1000 | | | OFF | | | | | | | | | |
| ★ High Acceptance | | | | ON | | | | | | | | |
| ★ High Security | | | | OFF | | | | | | | | |
| ★ Enable, if fishing, BA doesn't work anymore | | | | | ON | | | | | | | |
| ★ Disable, if fishing, BA Stop 3 minute. | | | | | OFF | | | | | | | |
| ★ Disable Bill Reject 4 Times BA Stop By 30 Sec | | | | | | ON | | | | | | |
| ★ Enable Bill Reject 4 Times BA Stop By 30 Sec | | | | | | OFF | | | | | | |
| ★ Harness Disable | | | | | | | ON | | | | | |
| ★ Harness Enable | | | | | | | OFF | | | | | |
| ★ Inhibit Active HIGH | | | | | | | | ON | | | | |
| ★ Inhibit Active LOW | | | | | | | | OFF | | | | |
| ★ Power On Stacker | | | | | | | | | ON | | | |
| ★ Power On Reject | | | | | | | | | OFF | | | |
| ★ Reserved | | | | | | | | | | ON | | |
| ★ Reserved | | | | | | | | | | OFF | | |
| ★ Reserved | | | | | | | | | | | ON | |
| ★ Reserved | | | | | | | | | | | OFF | |
| ★ Reserved | | | | | | | | | | | | ON |
| ★ Reserved | | | | | | | | | | | | OFF |

★Manufacture setting

Note : Please reset the bill acceptor after any changes on Dip switch.

U72 NTD4(Pulse/MDB/RS232 104U)

DIP SWITCHES SETTING : 2(Pulse)

| | FUNCTION | SW1 | SW2 | SW3 | SW4 |
|---|--------------------------|-----|-----|-----|-----|
| ★ | Credit-Pulse Normal High | ON | | | |
| | Credit-Pulse Normal Low | OFF | | | |
| ★ | Pulse Mode | | ON | | |
| | Other Mode | | OFF | | |
| ★ | 10 pulse/NTD 100 | | | OFF | OFF |
| | 20 pulse/NTD 100 | | | OFF | ON |
| | 40 pulse/NTD 100 | | | ON | OFF |
| | 200 pulse/NTD 100 | | | ON | ON |

★Manufacture setting

DIP SWITCHES SETTING : 2(RS232 104U)

| | FUNCTION | SW1 | SW2 | SW3 | SW4 |
|---|------------|-----|-----|-----|-----|
| ★ | Reserved | ON | | | |
| | Reserved | OFF | | | |
| | Pulse Mode | | ON | | |
| ★ | Other Mode | | OFF | | |
| | MDB | | | OFF | OFF |
| ★ | RS232 104U | | | OFF | ON |
| | Reserved | | | ON | OFF |
| | Reserved | | | ON | ON |

★Manufacture setting

DIP SWITCHES SETTING : 2(MDB)

| | FUNCTION | SW1 | SW2 | SW3 | SW4 |
|---|------------|-----|-----|-----|-----|
| ★ | Reserved | ON | | | |
| | Reserved | OFF | | | |
| | Pulse Mode | | ON | | |
| ★ | Other Mode | | OFF | | |
| ★ | MDB | | | OFF | OFF |
| | RS232 104U | | | OFF | ON |
| | Reserved | | | ON | OFF |
| | Reserved | | | ON | ON |

★Manufacture setting

Note :(1) Please reset the bill acceptor after any changes on Dip switch.

(2) Please open the panel of front, and can see the DIP switch.

Currency Assign Data

| Interface Bill value | Pulse | MDB | RS232 104U |
|-------------------------|----------|----------|------------|
| BV1 | NTD 100 | NTD 100 | NTD 100 |
| BV2 | NTD 200 | NTD 200 | NTD 200 |
| BV3 | NTD 500 | NTD 500 | NTD 500 |
| BV4 | NTD 1000 | NTD 1000 | NTD 1000 |