## U72 Option Switch Settings (Pulse/RS232 104U)

Supported bill RUB 10, 50, 100, 200, 500, 1000, 2000, 5000 8 Bill

		Tiou oili			, ,		,	,,,,	0, =0	, , ,		,		
	FUNCTI(	ON	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
	Reject RU	B 10	ON											
*	Accept RU	B 10	OFF											
	Reject RU	B 50		ON										
*	Accept RU	B 50		OFF										
	Reject RUI	3 100			ON									
*	Accept RUI	3 100			OFF									
	Reject RUI	3 200				ON								
*	Accept RUI	3 200				OFF								
	Reject RUB 5	500 &1000					ON							
*	Accept RUB 5	500 &1000					OFF							
	Reject RUB 2	000 & 5000						ON						
*	Accept RUB 20	000 & 5000						OFF						
	Harness Disable		(Pulse only)						ON					
*	Harness Enable(No Inhib Active)								OFF					
*	Inhibit Active HIGH		(Pulse on	ly)						ON				
	Inhibit Active LOW									OFF				
	Slow Output Pulse Lo 50 ms		(Pulse only)											
	Slow Output I tilsc	Hi 300 ms									ON			
	Fast Output Pulse	Lo 50 ms									OFF			
*	Tast Output I tilsc	Hi 100 ms									Ort			
	Reserved											ON		
*	Reserved											OFF		
	Reserved												ON	
*	Reserved												OFF	
	Reserved													ON
*	Reserved													OFF

★Manufacture setting

Note: Please reset the bill acceptor after any changes on Dip switch.

# U72 RUB8(Pulse/RS232 104U)

#### **DIP SWITCHES SETTING** : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
*	Credit-Pulse Normal High	ON			
	Credit-Pulse Normal Low	OFF			
*	Pulse Mode		ON		
	Other Mode		OFF		
*	1 pulse / RUB 10			OFF	OFF
	2 pulse / RUB 10			OFF	ON
	4 pulse / RUB 10			ON	OFF
	20 pulse / RUB 10		·	ON	ON

★Manufacture setting

#### DIP SWITCHES SETTING : 2(RS232 104U)

	FUNCTION	SW1	SW2	SW3	SW4
$\star$	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON		
$\star$	Other Mode		OFF		
	Reserved			OFF	OFF
$\star$	RS232 104U			OFF	ON
	Reserved			ON	OFF
	Reserved			ON	ON

<sup>★</sup>Manufacture setting

Note:(1) Please reset the bill acceptor after any changes on Dip switch.

(2)Please open the panel of front, and can see the DIP switch.

### Currency Assign Data

Interface Bill value	Pulse	RS232 104U			
BV1	RUB 10	RUB 10			
BV2	RUB 50	RUB 50			
BV3	RUB 100	RUB 100			
BV4	RUB 200	RUB 200			
BV5	RUB 500	RUB 500			
BV6	RUB 1000	RUB 1000			
BV7	RUB 2000	RUB 2000			
BV8	RUB 5000	RUB 5000			