

# U72 Option Switch Settings (Pulse/MDB/RS232 104U)

Supported bill NTD 100, 200, 500, 1000 4 Bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject NTD 100	ON											
★ Accept NTD 100	OFF											
★ Reject NTD 200		ON										
★ Accept NTD 200		OFF										
★ Reject NTD 500 & 1000			ON									
★ Accept NTD 500 & 1000			OFF									
★ High Acceptance				ON								
★ High Security				OFF								
★ Enable, if fishing, BA doesn't work anymore					ON							
★ Disable, if fishing, BA Stop 3 minute.					OFF							
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
★ Harness Disable							ON					
★ Harness Enable							OFF					
★ Inhibit Active HIGH								ON				
★ Inhibit Active LOW								OFF				
★ Power On Stacker									ON			
★ Power On Reject									OFF			
★ Slow Output Pulse	Lo 50 ms									ON		
	Hi 300 ms											
★ Fast Output Pulse	Lo 50 ms										OFF	
	Hi 100 ms											
★ Reserved											ON	
★ Reserved											OFF	
★ Reserved												ON
★ Reserved												OFF

★Manufacture setting

Note : Please reset the bill acceptor after any changes on Dip switch.

# U72 NTD4(Pulse/MDB/RS232 104U)

## DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal High	ON			
	Credit-Pulse Normal Low	OFF			
★	Pulse Mode		ON		
	Other Mode		OFF		
★	1 pulse / NTD 100			OFF	OFF
	2 pulse / NTD 100			OFF	ON
	4 pulse / NTD 100			ON	OFF
	20 pulse / NTD 100			ON	ON

★Manufacture setting

## DIP SWITCHES SETTING : 2(RS232 104U)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON		
★	Other Mode		OFF		
	MDB			OFF	OFF
★	RS232 104U			OFF	ON
	Reserved			ON	OFF
	Reserved			ON	ON

★Manufacture setting

## DIP SWITCHES SETTING : 2(MDB)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON		
★	Other Mode		OFF		
★	MDB			OFF	OFF
	RS232 104U			OFF	ON
	Reserved			ON	OFF
	Reserved			ON	ON

★Manufacture setting

Note :(1) Please reset the bill acceptor after any changes on Dip switch.

(2) Please open the panel of front, and can see the DIP switch.

## Currency Assign Data

Interface Bill value	Pulse	MDB	RS232 104U
BV1	NTD 100	NTD 100	NTD 100
BV2	NTD 200	NTD 200	NTD 200
BV3	NTD 500	NTD 500	NTD 500
BV4	NTD 1000	NTD 1000	NTD 1000